



ASM 315

No.	Code	Description	Qt	No.	Code	Description	Qt
1	HCAS215.01	Cavo - Cable	1	20A	HCF05UF.20A	Cuscinetto superiore - Upper bearing	1
3	HCAS215.03	Coperchio superiore - Upper cover	1	20B	HCF32TU.20B	Cuscinetto inferiore - Lower bearing	1
6	HCAS215.06	Staffa - Bracket	1	21	HCF05UF.21	Tenuta meccanica - Mechanical seal	1
7	HCAS215.07	Statore - Stator 1/230/50	1	24	HAS215.24	Boccola tenuta olio - Oil seal bush	1
9	HCAS215.09	Albero con rotore - Shaft(with Rotor)	1	25	HCAS215.25	Corteco - Oil seal	1
10	HCAS215.10	Auto-cut	1	26	HCAS215.26	Corpo pompa - Pump body	1
12	HCF32UF.12A	Interruttore centrifugo - Centrifugal switch	1	27	HCAS215.27	Girante - Impeller	1
13	HCF32UF.13B	Coperchio Interruttore centrifugo - Centrifugal switch cover	1	28	HCAS215.28	Coperchio corpo pompa - Casing cover	1
14A	HCF05UF.14A	Condensatore - Capacitor	1	30	HCA32F.30	Base - Footing	1
14B	HCF32UF.14B	Condensatore avviamento - Start capacitor	1	31	HCA32F.31	Griglia - Strainer	1
16	HCAS215.16	Cilindro motore - Motor frame	1	41	HCAS215.41	Maniglia - Handle	1
18	HCAS215.18	Corpo esterno - Out cover	1	46	HCF05UF.46	Linguetta - Key	1
19	HCAS215.19	Staffa cuscinetto - Bearing bracket	1	47	HCAS215.47	Imballo - Packing 1set	1