


WATER PUMP PARTS DIAGRAM

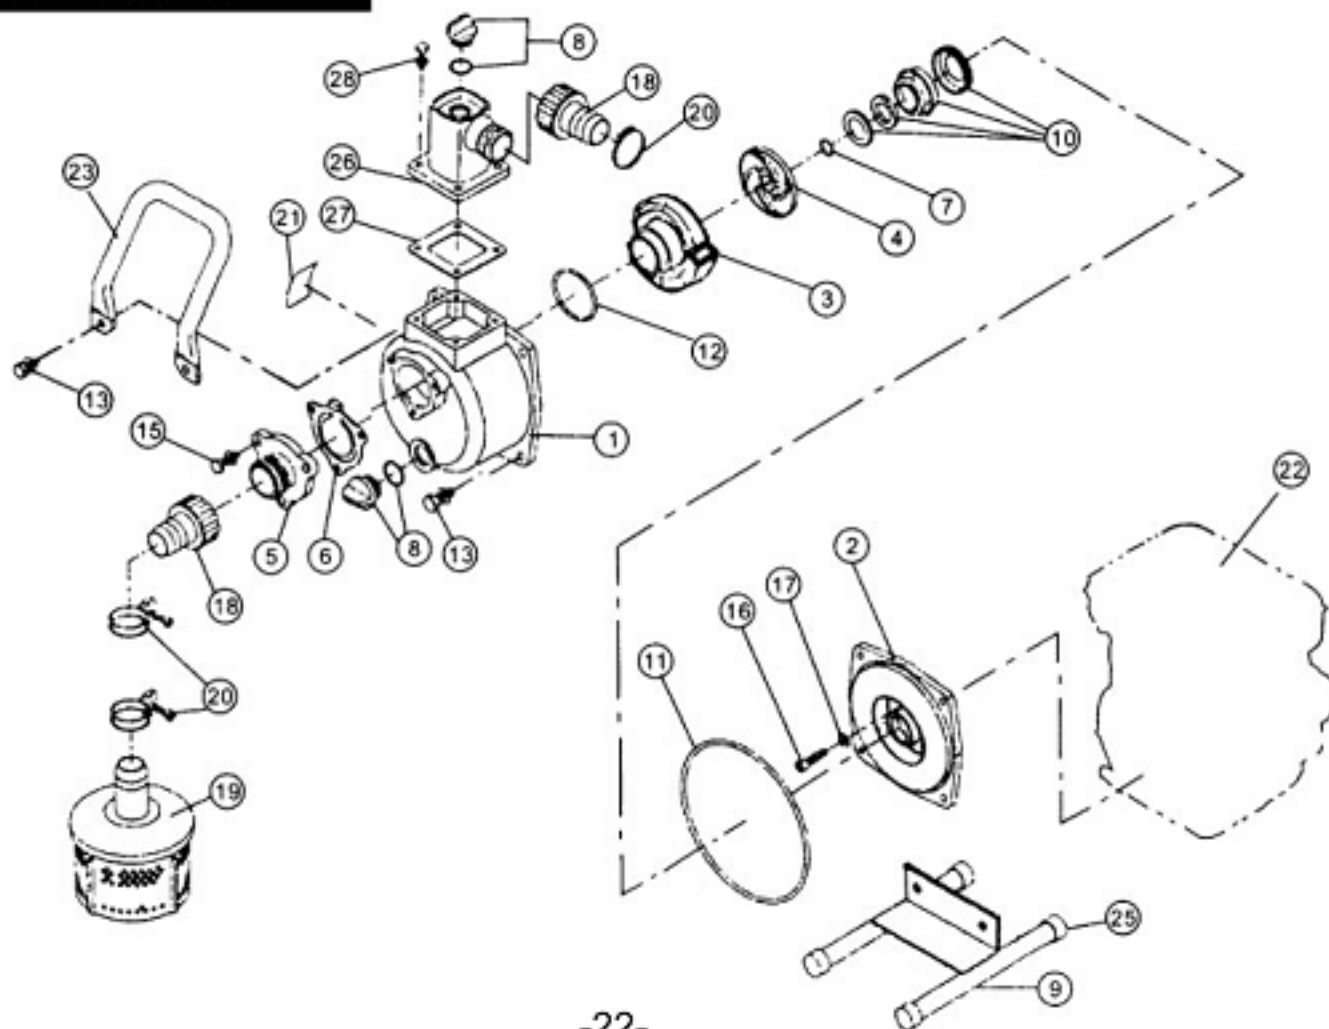


XPUMP25 despiece bomba

No.	PARST No.	PARST NAME.	QTY	RMB
1	13107	Pump casing	1	
2	13101	Flange braket	1	
3	13105	Volute casing	1	
4	13104	Impeller	1	
5	13116	Suction flange	1	
6	13111	Check valve	1	
7		Adjusting washer		
8	13108	Plug set	2	
9	13200	Base set	1	
10	HRHFT-12	Mechanical seal	1	
11	13102	O-ring	1	
12	13106	O-ring	1	
13		Bolt	4	
15		Bolt	3	
16		Socket bolt	4	
17		Seal washer	3	
18	14011	Coupling set	2	
19	14100	Strainer	1	
20		Hose band	3	
21	13113	Tag Engine	1	
22	000000	Engine	1	
23	13001	Handle	1	
25	13201	Pipe rubber	4	
26	13118	Delivery flange	1	
27	13114	Flange packing	1	
28		Bolt	4	

GASOLINE ENGINE PARTS DIAGRAM

MOTOR

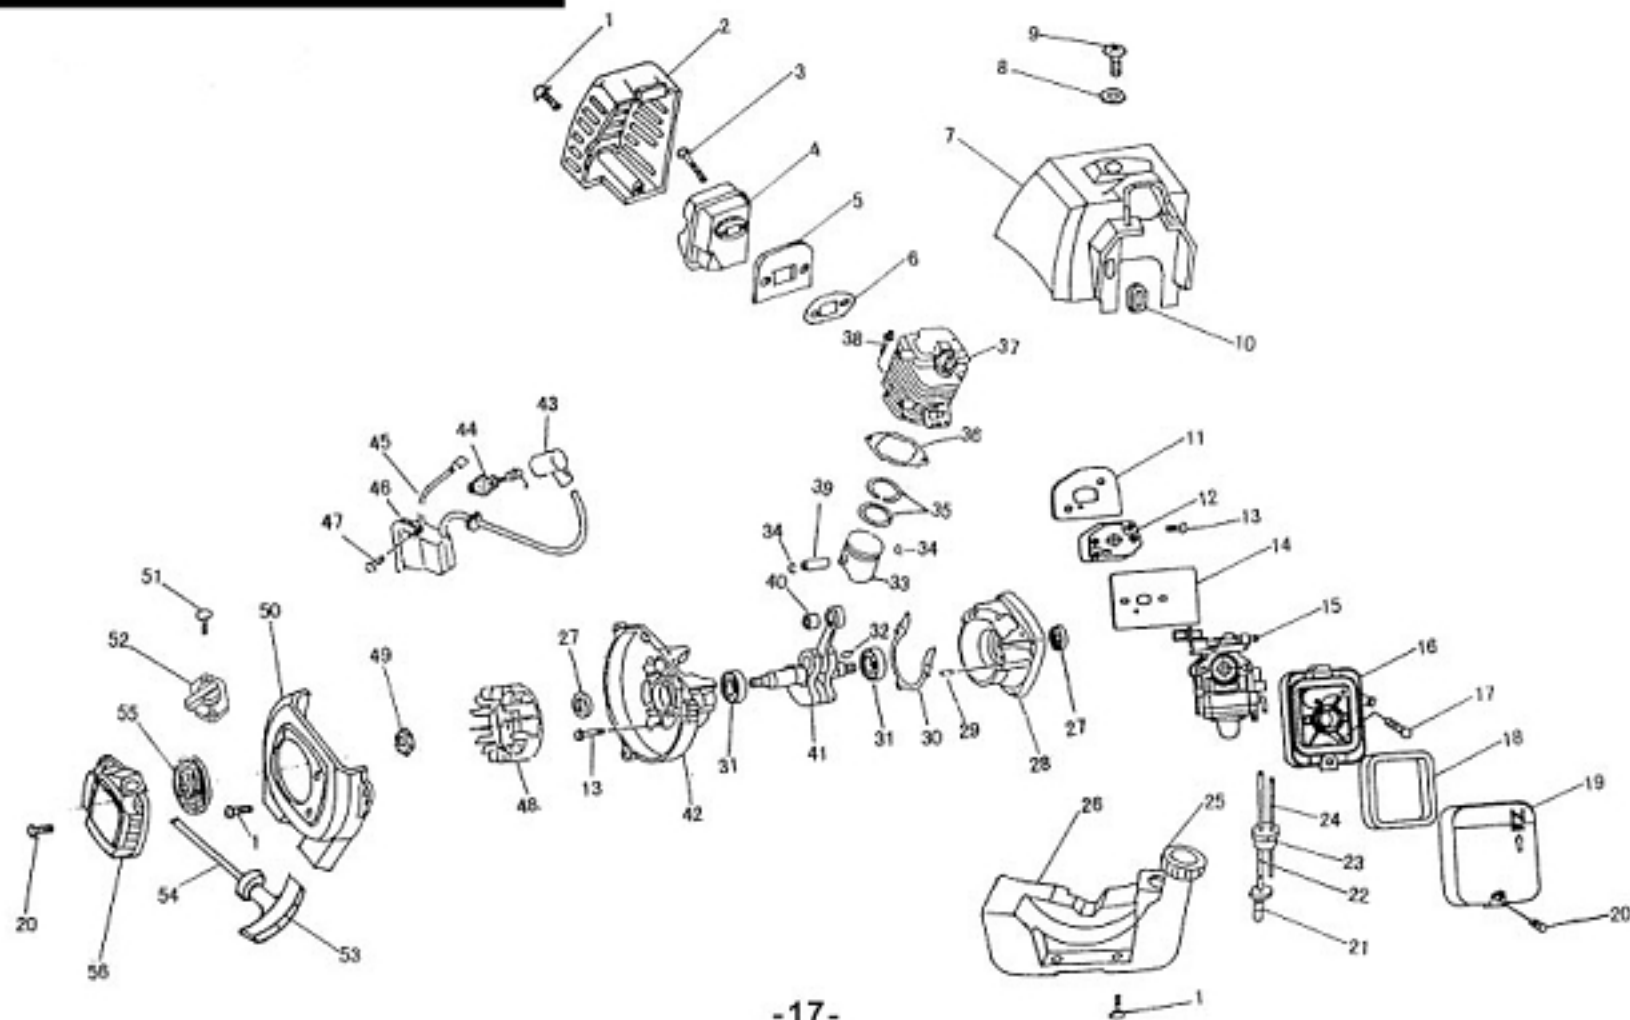

XPUMP25 DESPIECE MOTOR

No.	PARST No.	PARST NAME.	QTY
1	GB/T9074.4	Screw M5X16	1
2	ST025-08001	Muffler guard	1
3	GB/T70.1	Screw M5X50	2
4	ST025-07000	Muffler	1
5	ST025-08008	Muffler big gasket	1
6	ST025-08007	Muffler small gasket	1
7	ST025-02001	Cylinder body jacket	1
8	GB/T96	Washer 5	1
9	GB/T9074.4	Round head screw M5X14	1
10	ST025-04001	Wire protective ring	1
11	ST025-07008	Air filter small gasket	1
12	ST025-07003	Air filter connection piece	1
13	GB/T70.1	Screw M5X25	5
14	ST025-07007	Air filter big gasket	1
15	Q025-01001	Carburator	1
16	ST025-07002	Air filter internal casing assembly	1
17	GB/T9074.4	Screw M5X60	1
18	ST025-07006	Air filter element	1
19	ST025-07001	Air filter external casing	1
20	GB/T9074.4	Screw M5x14	1
21	ST025-09201	Gasoline filter	1
22	ST025-09003	Oil-in pipe	1
23	ST025-09002	Oil tank connector	1
24		Oil return pipe	1
25	ST025-09100	Oil tank part	1
26	ST025-09001	Oil tank	1
27	GB/T9877.1	Oil seal 12x22x5	2
28	ST025-01003	left machine body	1
29	GB/T119.1	Cylindrical pin	2
30	ST025-01004	Machine boday gasket	1
31	GB297	bearing 6001	2
32	GB/T1099	Half-round key 3x13	1
33	ST025-04003	Piston	1
34	ST025-04002	Piston pin retainer	2
35	ST025-04004	Piston ring	2
36	ST025-04005	Cylinder body gasket	1
37	ST025-04006	Cylinder body	1

38	GB/T70.1	Screw M5x20	2
39	ST025-04001	Piston pin	1
40	GB/T5801	bearing K8x11x11	1
41	ST025-05000	Crankshaft connecting rod assembly	1
42	ST025-01001	Right machine body	1
43	ST025-01007	High voltage cap assembly	3
44	ST025-10001	Spark plug	1
45	ST025-12008	Wire	1
46	ST025-11000	Magneto	1
47	GB/T9074.4	Screw M4x25	1
48	ST025-05004	Flywheel	2
49	GB/T6177.1	Flange screw M8	1
50	ST025-01002	Front casing	1
51	GB/T9074.4	2 screw Mx10	1
52	ST025-12000	Stop switch	1
53	ST025-16007	Handle	1
54		rope	1
55	ST025-06000	starter assembly	1
56	ST025-06001	Coil-spring	1

