

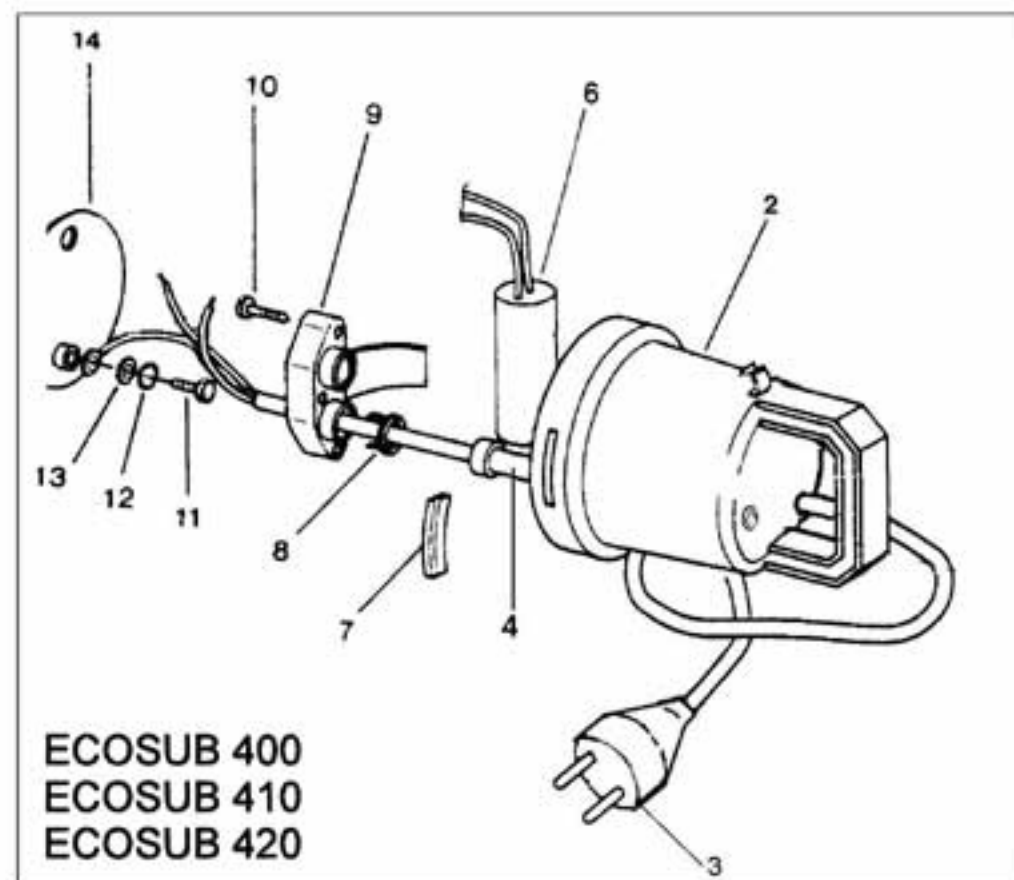


ECOSUB 410SW

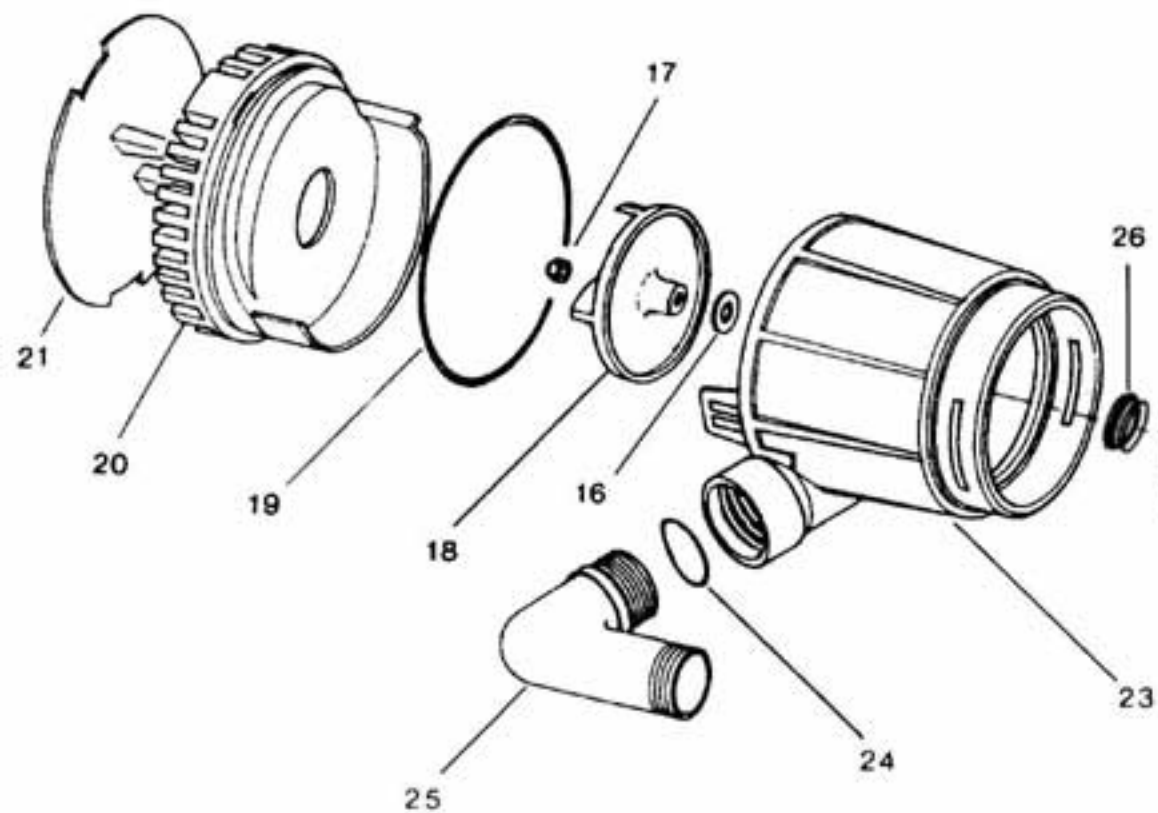

ECOSUB 400A
ECOSUB 410A
ECOSUB 420A

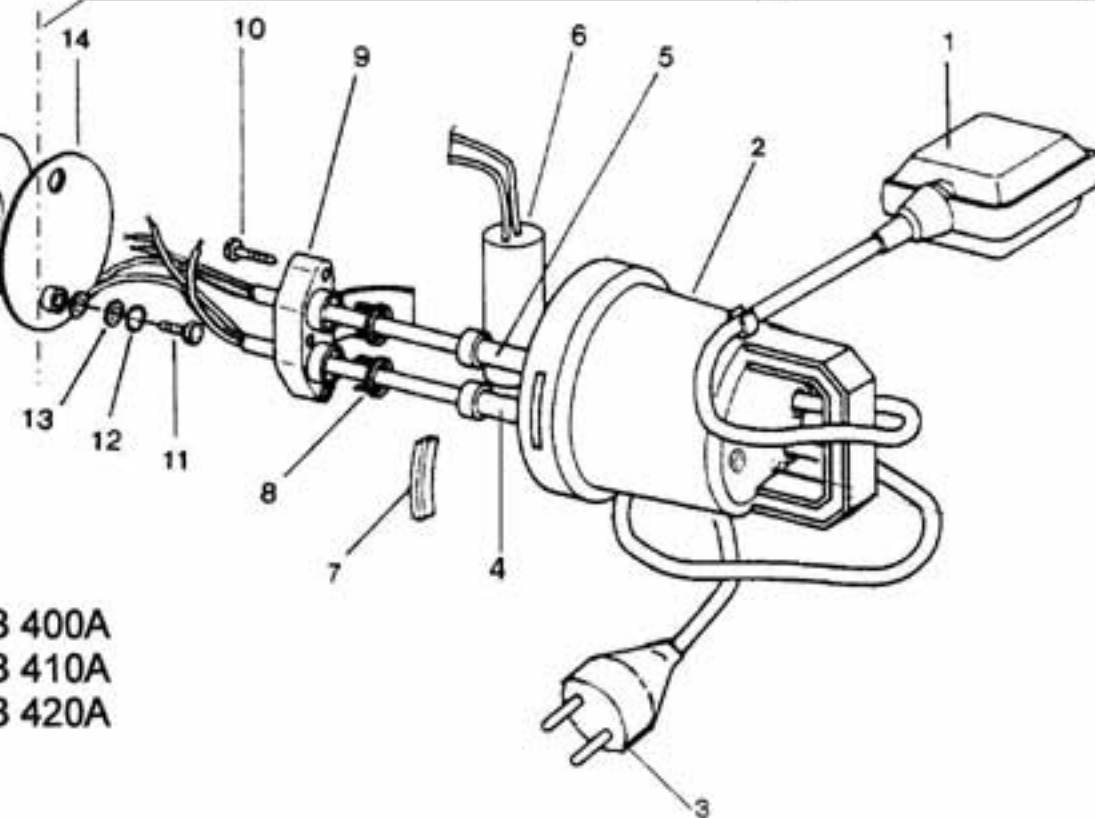

ECOSUB 410SW

Model	Ref.	Art. Leader	Descrizione	Description
ECOSUB 400-410-420-400A-410A-420A	1	P1380045	Galleggiante (versione automatica)	Floatswitch (automatic version)
ECOSUB 400-410-420-400A-410A-420A	2	S3600169	Coperchio 400 - 410 - 420	Cap
ECOSUB 400-410-420-400A-410A-420A	2	S3600170	Coperchio 400A-410A-420A (versione automatica)	Cap (automatic version)
ECOSUB 400-410-420-400A-410A-420A	3	P1320001	Cavo di alimentazione 3m. H05RN-F	Cable 3m. H05RN-F
ECOSUB 400-410-420-400A-410A-420A	3	P1320025	Cavo di alimentazione 10 m. H05RN-F	Cable 10m. H05RN-F
ECOSUB 400-410-420-400A-410A-420A	3	P1330004	Cavo di alimentazione 10m. H07RN-F	Cable 10m. H07RN-F
ECOSUB 400-410-420-400A-410A-420A	4	P1230002	Passacavo d7,1	Grommet d7,1
ECOSUB 400-410-420-400A-410A-420A	4	P1230003	Passacavo d9	Grommet d9
ECOSUB 400-410-420-400A-410A-420A	5	P1230003	Passacavo d9 (versione automatica)	Grommet d9 (automatic version)
ECOSUB 400-410-420-400A-410A-420A	6	P1360034	Condensatore 410-410A-420-420A	Capacitor 410-410A-420-420A
ECOSUB 400-410-420-400A-410A-420A	6	P1360035	Condensatore 400-400A	Capacitor 400-400A
ECOSUB 400-410-420-400A-410A-420A	7	S3500011	Chiavetta	Lock
ECOSUB 400-410-420-400A-410A-420A	8	S3500336	Anello antistrappo 400-410-420	Anti-tear ring 400-410-420
ECOSUB 400-410-420-400A-410A-420A	8	S3500336	Anello antistrappo 400A-410A-420A	Anti-tear ring 400A-410A-420A
ECOSUB 400-410-420-400A-410A-420A	9	S3500335	Clip pressacavo	Cable fastener
ECOSUB 400-410-420-400A-410A-420A	10	P1100008	Vite	Screw
ECOSUB 400-410-420-400A-410A-420A	11	P1100003	Vite terra	Earth screw
ECOSUB 400-410-420-400A-410A-420A	12	P1120003	Rosetta elastica	Spring-washer
ECOSUB 400-410-420-400A-410A-420A	13	P1120051	Rosetta	Washer
ECOSUB 400-410-420-400A-410A-420A	14	S3500106	Disco isolante	Insulation disk
ECOSUB 400-410-420-400A-410A-420A	15	G4300001	Gruppo motore 400-400A	Motor 400-400A
ECOSUB 400-410-420-400A-410A-420A	15	G4301001	Gruppo motore 410-410A	Motor 410-410A
ECOSUB 400-410-420-400A-410A-420A	15	G4302002	Gruppo motore 420-420A	Motor 420-420A
ECOSUB 400-410-420-400A-410A-420A	16	P1120008	Rosetta	Washer
ECOSUB 400-410-420-400A-410A-420A	17	P1110005	Dado	Nut
ECOSUB 400-410-420-400A-410A-420A	18	S3500528	Girante 400-400A-410-410A	Impeller 400-400A-410-410A
ECOSUB 400-410-420-400A-410A-420A	18	S3500559	Girante 420-420A	Impeller 420-420A
ECOSUB 400-410-420-400A-410A-420A	19	P1200008	Guarnizione O.Ring	Joint O.Ring
ECOSUB 400-410-420-400A-410A-420A	20	S3500017	Filtro	Filter
ECOSUB 400-410-420-400A-410A-420A	21	S3500107	Base filtro	Filter base
ECOSUB 400-410-420-400A-410A-420A	22	P1200007	Guarnizione O.Ring	Joint O.Ring
ECOSUB 400-410-420-400A-410A-420A	23	S3500015	Corpo pompa 400-400A-410-410A	Pump housing 400-400A-410-410A
ECOSUB 400-410-420-400A-410A-420A	23	S3500016	Corpo pompa 420-420A	Pump housing 420-420A
ECOSUB 400-410-420-400A-410A-420A	24	P1200009	Guarnizione O.Ring	Joint O.Ring
ECOSUB 400-410-420-400A-410A-420A	25	S3600109	Gomito 1.1/4"x27 400-400A-410-410A	Elbow 1.1/4"x27 400-400A-410-410A
ECOSUB 400-410-420-400A-410A-420A	25	S3600110	Gomito 1.1/4"x35 420-420A	Elbow 1.1/4"x35 420-420A
ECOSUB 400-410-420-400A-410A-420A	26	P1210002	Guarnizione V.Ring	V.Ring Joint