


# The Parts List of Model 1E36F-2A Engine

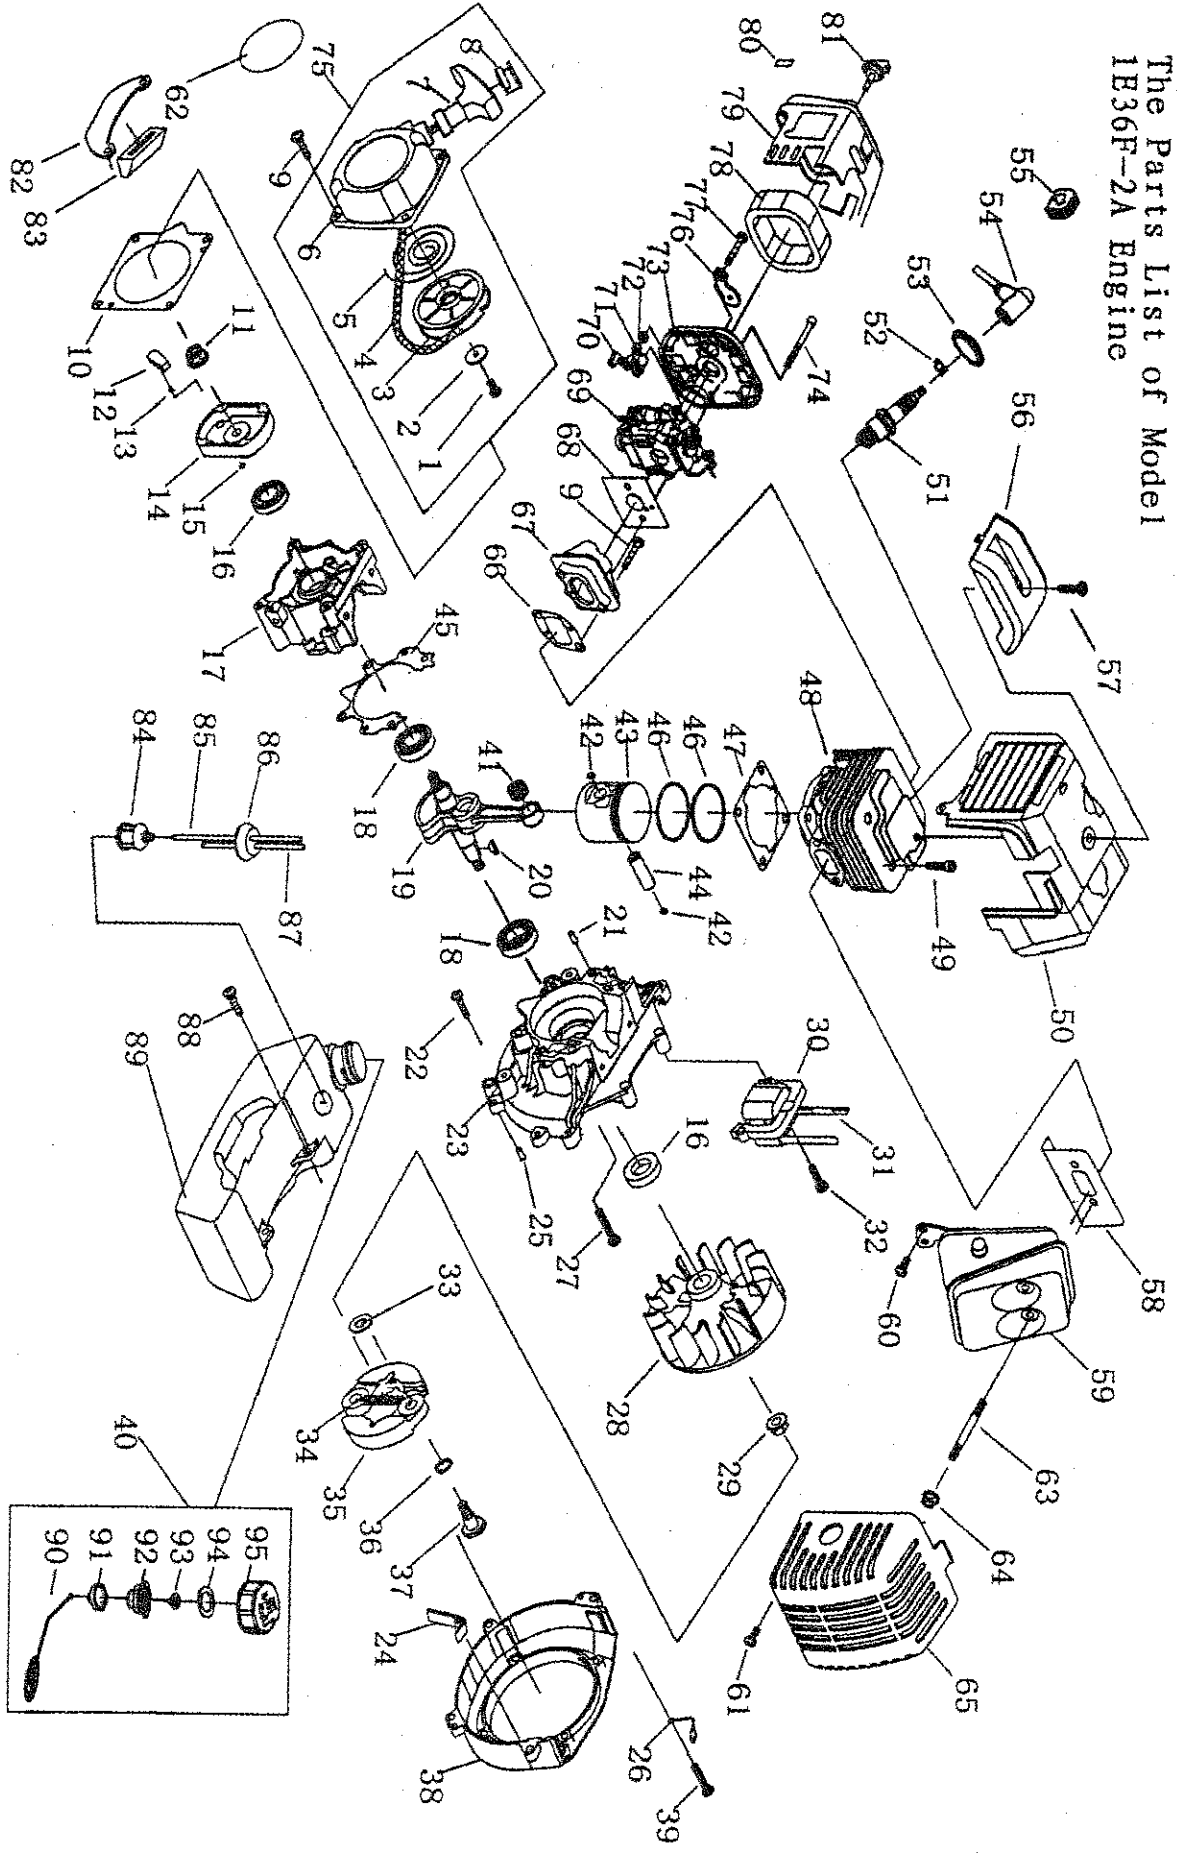

# 1E36F--2A GASOLINE ENGINE (1)

NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.
1	GB67	Screw M5×12	1	25	GB119	Pin B4×10	2
2	1E40F-5.11-2	Washer	1	26	1E40F-5-15	Stand	1
3	1E40F-5.11-1	Start Rope Reel	1	27	GB9074.4	Screw M5×30	4
4		Rope	1	28		MAGNETO ROTOR COMP.	1
5	1E40FP-3Z.4-7	Recoil Spring	1	29	GB6177	Nut M8	1
6	1E40F-5.11.1	Start Cover Ass'y	1	30		IGNITION COIL COMP.	1
7	1E40FP-3Z.4-2	Start Handle	1	31	1E36F-2.3.1	Cord Comp.	1
8	1E40FP-3Z.4-10	Ring	1	32	GB9074.13	Bolt M5×20	2
9	GB9074.4	Screw M5×20	6	33	1E36F-3	WasherB	2
10	1E40F-5-10	Gasket	1	34	1E36F-2C.4-1	Spring	1
11	GB6170	Nut M8	1	35	1E36F-2C.4.1	Expander	2
12	1E46FP.4-2	Start Claw	1	36	1E40F-5-11	Washer	2
13	1E36F.1.2-2	Start Spring	1	37	1E40F-5-12	Screw Pin	2
14	1E40F-5.7-1	Start Reel	1	38	1E36F-2-8	Fan Cover	1
15	GB896	Stop Ring 4	1	39	GB9074.13	Bolt M5×20	4
16	1E36F.2	Oil-seal	2	40	1E32FL.6.2	Lid Ass'y	1
17	1E36F-2.6-2	Crank Case	1	41	1E36F-2.4.1	Bearing	1
18	GB/T276	Bearing 6201/P6	2	42	1E36F.10-2	Ring	2
19	1E36F-2.4.3	Crank Shaft	1	43	1E36F-2.4.2	Piston	1
20	GB1099	Key 3x5x13	1	44	1E36F.10-1	Piston Pin	1
21	GB119	Pin B5×12	2	45	1E36F-2.6-3	Gasket	1
22	GB9074.4	Screw M5×12	2	46	1E36F-2.10-1	Piston Ring	2
23	1E36F-2.6-1	Crank Case	1	47	1E36F-2-6	Gasket	1
24	1E36F-2-11	Flash Pan	1	48	1E36F-2-4	Cylinder	1

PISTON COMPLETO  
REF. 1E36F-2.4.2C

bobina 1E36F-2-3-3

SI DE LA POLEA INTERNA DEL ARRANQUE SALEN 2 ALAMBRES, EL CÓDIGO ES 1E36FE-7

## 1E36F-2A GASOLINE ENGINE (2)

NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.
49	GB/T70.1	Screw M5X18	4	73	1E34F.1.1	Cleaner Inside cover	1
50	1E36F-2.5	Guide Cover Ass'y	1	74	GB/T9074.4	Screw M5x50	2
51	L6 (LD)	Spark Plug	1	75	1E40F-5.11	Starter	1
52	1E40F-3A.8-2	Spring	1	76	1E34F.1-3	CHOKER	1
53	1E34F.5-3	Plug Cap	1	77	GB/T845	Screw ST4. 2X12	1
54	1E34F.5-2	Cap	1	78	1E34F.1-1	Cleaner Outside Cover	1
55	1E40F-5.3-1	Plug	1	79	1E34FA.1-1	Filter Net	1
56	1E36F-2-7	Cover	1	80	1E40F-3A.3-5	Label	1
57	GB9074.4	Screw M5X20	1	81	1E34F.1.2	Screw	1
58	1E36F-2-5	Gasket	1	82	1E40F-5A-4	Stand	1
59	1E36F-2.2	Muffler	1	83	1E40F-5A-2	Rubber Cover	1
60	GB9074.4	Screw M5X12	1	84	1E34F.9.2-3A	Cleaner Cover	1
61	GB9074.4	Screw M5X12	1	85	1E34F.9.2-2	Fuel Pipe	1
62	1E36F-2-10	Label	1	86	1E36FF.8.1-1	Plug	1
63	1E36F-2-9	Bolt	2	87	GB/T13527.1	Fuel Pipe	1
64	GB6177	Nut M5	2	88	GB/T9074.4	Screw M5X16	2
65	1E36F-2.7	Muffler Cover	1	89	1E36F-2A.3-1	Fuel Tank	1
66	1E36F-2-2	Gasket	2	90	1E32FL.6.2-4	Chain	1
67	1E36F-2A-2	Admitting Pipe	1	91	1E32FL.6.2-3	End Cover	1
68	1E36F-2A-1	Gasket	1	92	1E32FL.6.2-2	Inside Cover	1
69	1E36F-2A.1	Carburetor	1	93	EB-415.4.1.1-1	Inlet	1
70	1E34F.1-2	CHOKER HANDLE	1	94	CG420.1.3.1-2	Gasket	1
71	1E34F.1-7	Stop ring	1	95	1E32FL.6.2-1	Fuel Tank Lid	1
72	GB/T6172	Nut 4	1				1