


CATALOGO
DE
RECAMBIOS

MF-100

CONTENTS


	page
1. Crankcase assy.....	3
2. Crankcase cover assy.....	4
3. Cylinder cover.....	5
4. Crankshaft, piston & connecting rod.....	6
5. Combination of camshaft & valve.....	7
6. Carburetor assy.....	8
7. Fuel tank assy.....	9
8. Air cleaner assy	10
9. Muffler.....	11
10. Recoil starter.....	12
11. Governing control system.....	13
12. Flywheel.....	14
13. Ignition coil.....	15
14. Pump.....	16

Crankcase assy - R

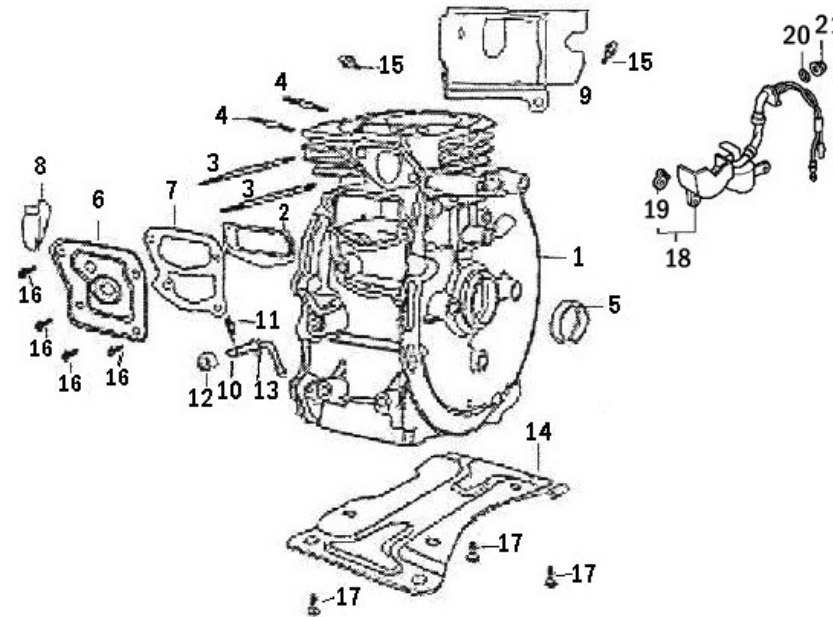


Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	11100	Crankcase	1		12	26327	Oil seal, sway bar	1	
2	11130	Valve chamber clapboard sub-assy	1		13	26329	Washer, sway bar	1	
3	12252	Stud M5 x 118	2		14	41151	Bottom plate	1	
4	12253	Stud M6 x 52	2		15	GB5789-86	Bolt M6 x 14	2	
5	13180	Oil seal (17 x 30 x 6), crankshaft	1		16	GB5789-86	Bolt M5 x 10	4	
6	15463	Cover, oil filter	1		17	GB5789-86	Bolt M8 x 18	4	
7	15465	Gasket	1		18	24012	Oil sensor assy	1	
8	15512	Return pipe	1		19	24100	O-ring	1	
9	19721	Flow guard, lower	1		20	24105	Plastic gasket	1	
10	26311	Sway bar	1		21	24106	Nut M14	1	
11	26321	Keeper, sway bar	1						

Crankcase cover assy

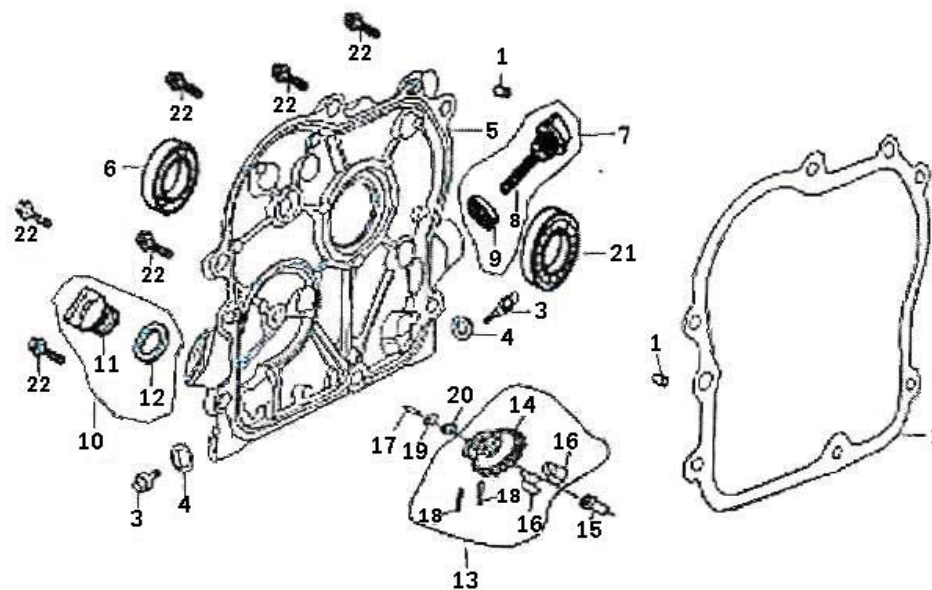


Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	11118	Set pin $\Phi 8 \times 14$	2		12	15652	Seal, oil plug	1	
2	11119	Gasket, crankcase	1		13	25120	Driven gear sub-assy, governor	1	
3	11212	Drain plug	2		14	25121	Driven gear, governor	1	
4	11213	Washer	2		15	25131	Sliding sleeve	1	
5	11311	Crankcase cover	1		16	25141	Flyweight	2	
6	13180	Oil seal (17 x 30 x 6), crankshaft	1		17	25151	Governing shaft	1	
7	15610	Dipstick sub-assy	1		18	25163	Pin, flyweight	2	
8	15611	Dipstick	1		19	25164	Snap ring	1	
9	15612	Seal, dipstick	1		20	25165	Washer, driven gear	1	
10	15650	Oil plug sub-assy	1		21	GB276-94	Bearing 6203	1	
11	15651	Oil plug	1		22	GB5789-86	Bolt M6 x 29	6	

Cylinder cover

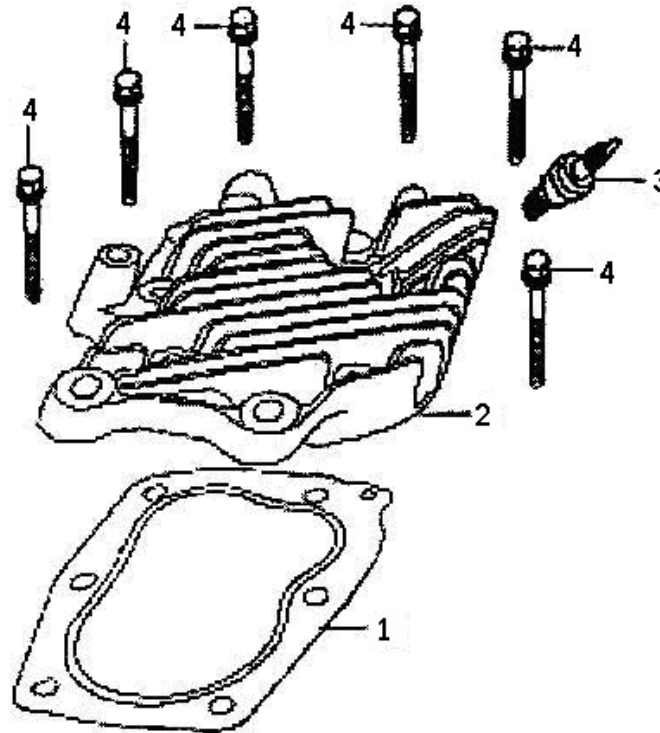

Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	12221	Gasket, cylinder head	1		3	34200	Spark plug	1	
2	12311	Cylinder cover	1		4	GB5789-86	Bolt M6 x 35	6	


Crankshaft, piston & connecting rod

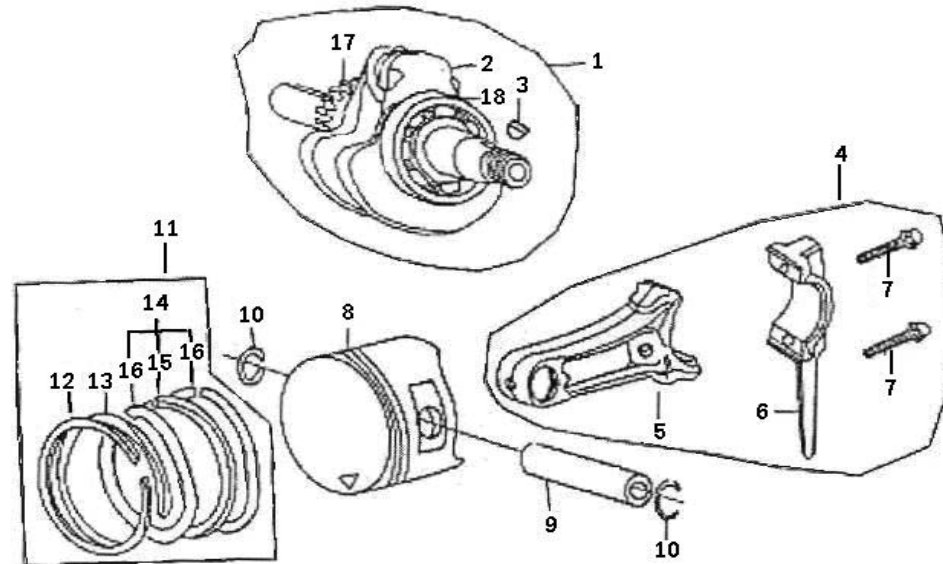

Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	13110	Crankshaft sub-assy	1		10	13222	Circlip, piston pin	2	
2	13111	Crankshaft	1		11	13300	Piston ring set	1	
3	13118	Woodruff key	1		12	13311	Piston ring (I)	1	
4	13130	Connecting rod	1		13	13312	Piston ring (II)	1	
5	13131	Shank	1		14	13320	Oil ring, 3-piece	1	
6	13132	Cap connecting rod	1		15	13321	Expander	1	
7	13133	Bolt	2		16	13322	Side rail	2	
8	13211	Piston	1		17	14211	Timing driving gear	1	
9	13221	Piston pin	1		18	GB276-94	Bearing 6203	1	


12441 chaveta toma de fuerza

Combination of camshaft & valve

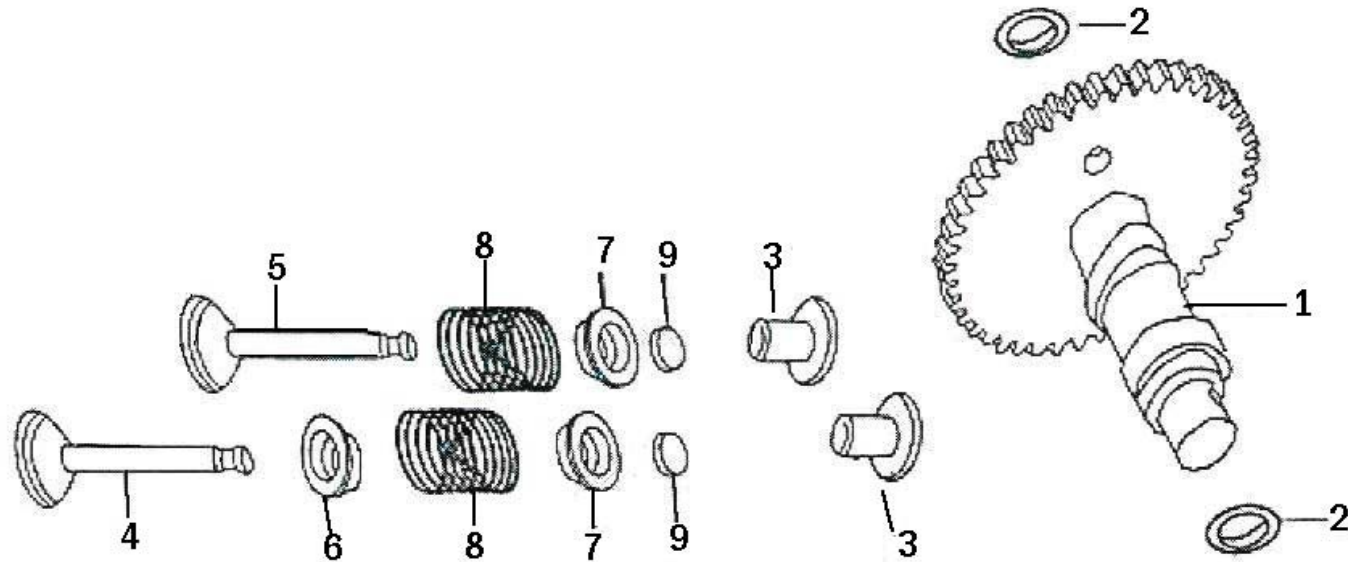


Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	14111	Camshaft	1		6	14730	Oil seal, valve stem	1	
2	14114	Washer, camshaft	2		7	14751	Spring seat, valve	2	
3	14455	Tappet	2		8	14755	Valve spring	2	
4	14711	Intake valve	1		9	14758	Cap	2	
5	14721	Exhaust valve	1						

Carburetor assy

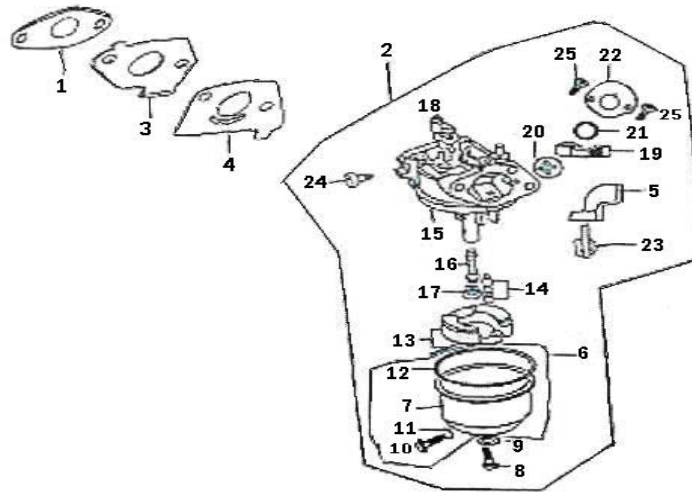


Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	12254	Gasket, intake port	1		14	16240	Needle valve	1	
2	16100	Carburetor assy	1		15	16250	Mixture chamber body	1	
3	16141	Connecting block	1		16	16251	Main nozzle	1	
4	16142	Gasket, carburetor	1		17	16254	Main jet	1	
5	16148	Choke lever	1		18	16280	Throttle unit	1	
6	16210	Float chamber sub-assy	1		19	16311	Throttle lever	1	
7	16211	Float chamber	1		20	16312	Airproof washer	1	
8	16213	Screw	1		21	16313	Washer	1	
9	16214	Seal, screw	1		22	16314	Cover	1	
10	16215	Drain screw, float chamber	1		23	16330	Choke unit	1	
11	16216	Washer	1		24	16421	Idle adjusting screw	1	
12	16219	Gasket, float chamber	1		25	GB5789-86	Screw M4 x 6	2	
13	16230	Float sub-assy	1						

Fuel tank assy

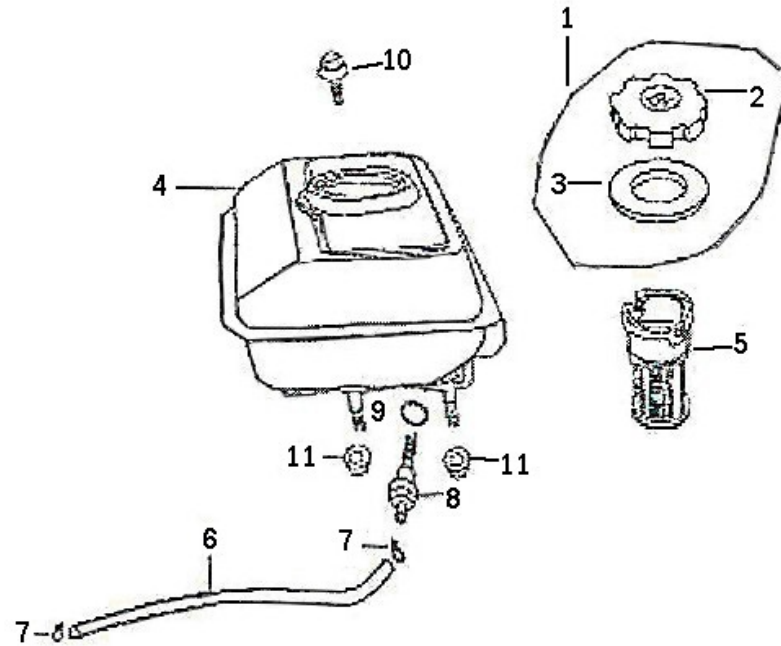


Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	16500	Fuel filler cap sub-assy	1		7	16937	Pipe clamp	2	
2	16510	Fuel filler cap	1		8	16950	Outlet nipple	1	
3	16521	Packing ring	1		9	16961	Seal ring, outlet nipple	1	
4	16610	Fuel tank	1		10	GB5789-86	Bolt M6 x 14	1	
5	16916	Filter cup	1		11	GB6177-86	Nut M6	2	
6	16931	Outlet pipe	1						

Air cleaner assy

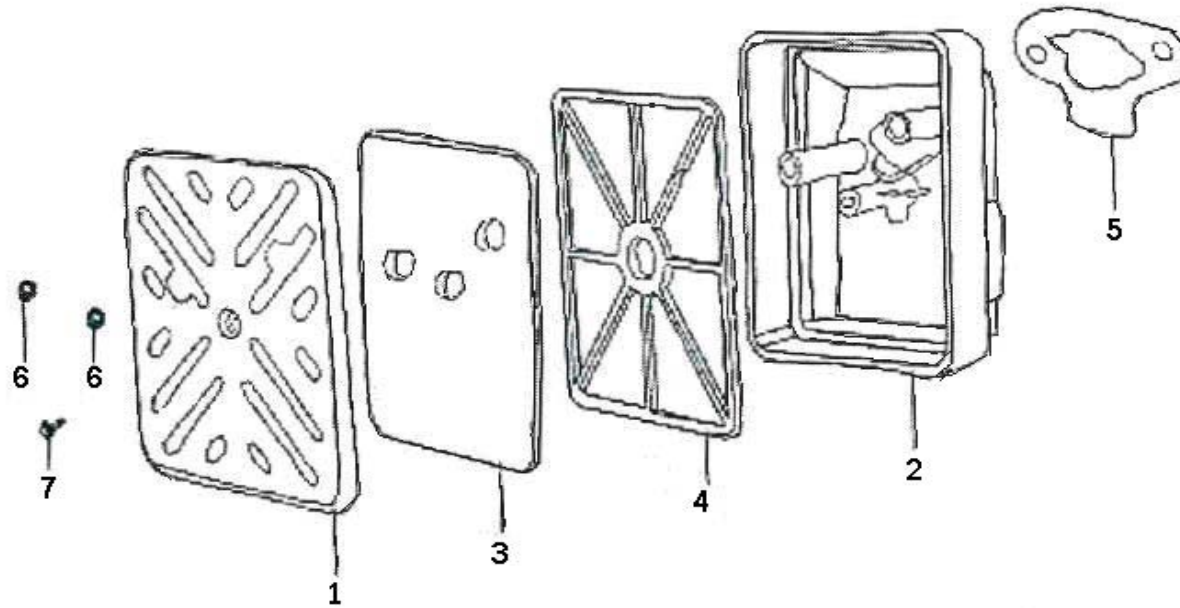


Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	17111	Cover, air cleaner	1		5	17331	Gasket, air cleaner	1	
2	17131	Housing, air cleaner	1		6	GB6177-86	Nut M6	2	
3	17133	Foam, air cleaner	1		7	GB/T845-1985	Self-tapping screw ST4 x 10	1	
4	17171	Bracket, air cleaner	1						

Muffler

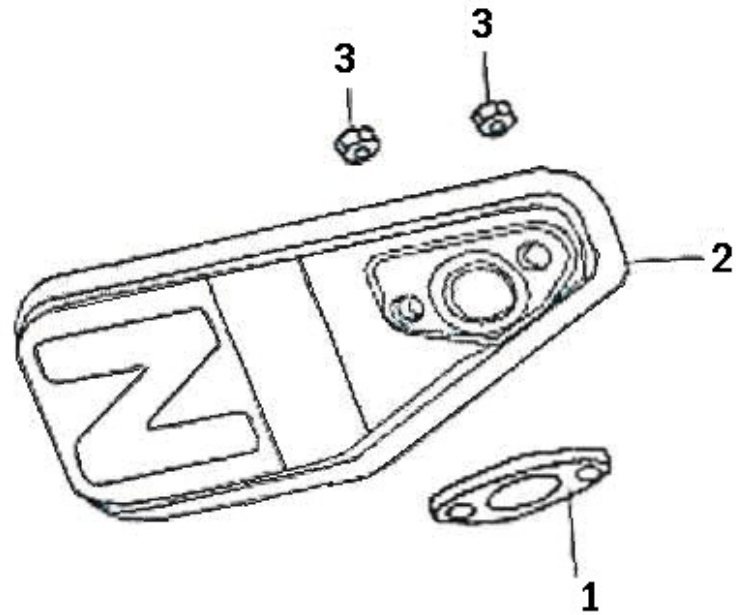

Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	12255	Gasket, exhaust port	1		3	GB6177-86	Nut M6	2	
2	18300	Exhaust muffler	1						


Recoil starter- R

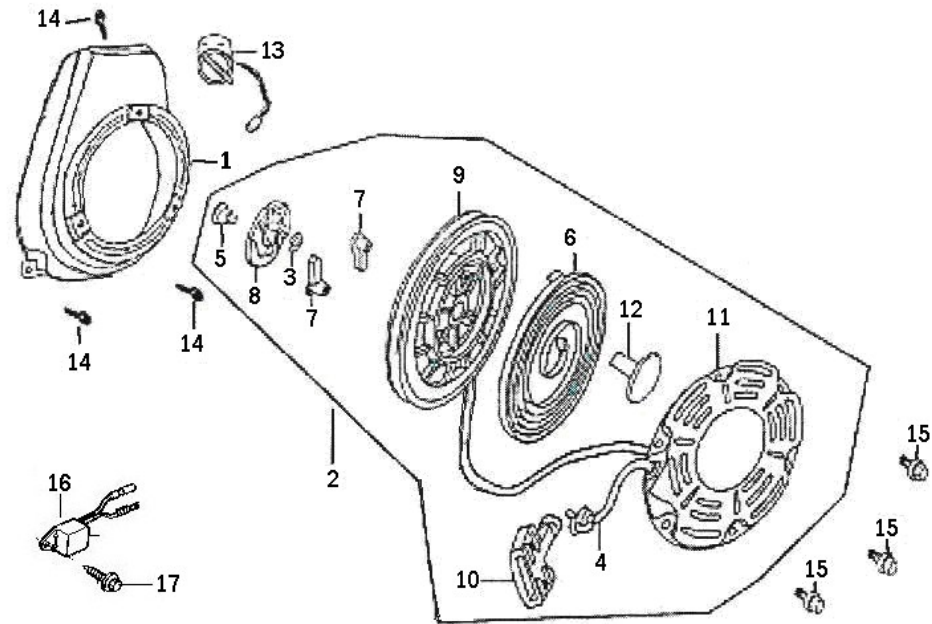

Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	19710	Fan hood sub-assy	1		10	27361	Grip, starter	1	
2	27300	Recoil starter	1		11	27381	Casing	1	
3	27311	Friction spring	1		12	27384	Spring seat	1	
4	27313	Rope	1		13	35410	Engine switch	1	
5	27315	Shoulder screw	1		14	GB5789-86	Bolt M6 x 8	3	
6	27319	Spiral spring	1		15	GB5789-86	Bolt M6 x 14	3	
7	27331	Ratchet	2		16	35100	Oil alert unit	1	
8	27341	Lid, spring	1		17	GB5789-86	Bolt M6 x 10	1	
9	27351	Spool, starter	1						


**NO HAY DESPIECE DEL ARRANQUE,
TIENE QUE SER COMPLETO**

Covering control system

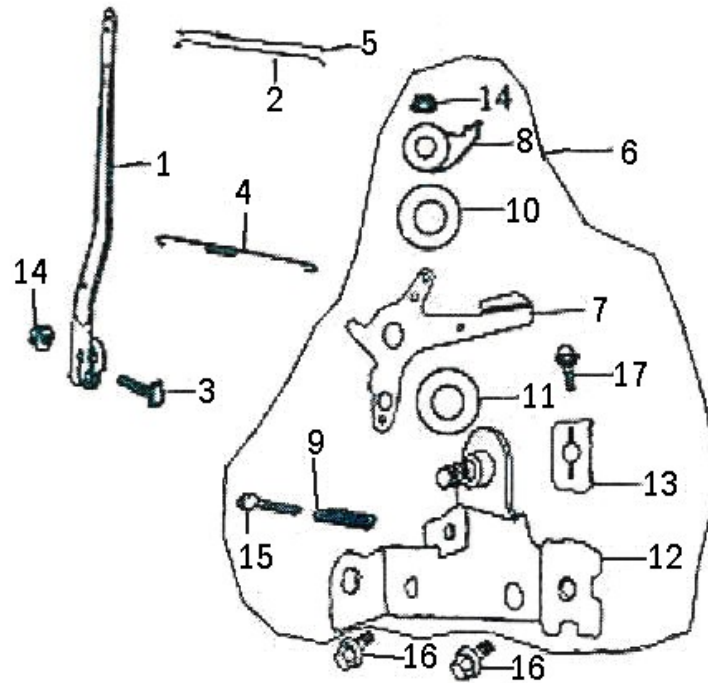


Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	26331	Governor arm	1		10	26418	Wave washer	1	
2	26341	Pull-rod, governor	1		11	26419	Washer	1	
3	26362	Lock boll	1		12	26420	Supporting plate unit	1	
4	26363	Return spring	1		13	26422	Pressure plate	1	
5	26364	Assistant spring, governor	1		14	GB6177-86	Nut M6	2	
6	26410	Mount, governor	1		15	GB818-85-H	Bolt M5 x 25	1	
7	26412	Handle	1		16	GB5789-86	Bolt M6 x 14	2	
8	26414	Positioning plate	1		17	GB818-85-H	Bolt M5 x 16	1	
9	26415	Spring, governor	1						

Flywheel

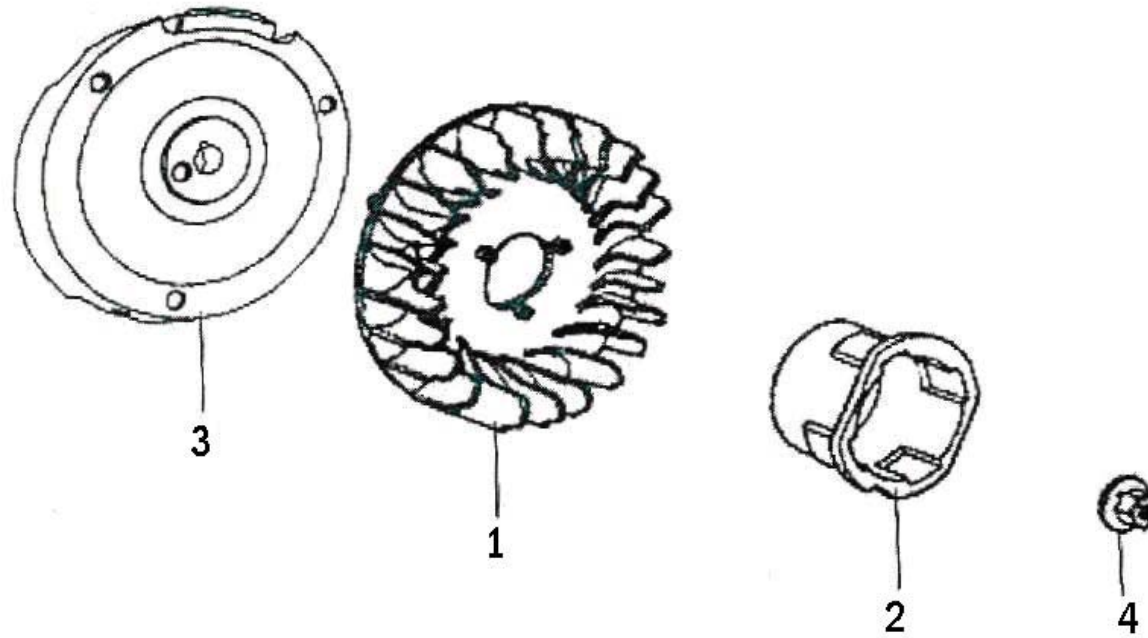


Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	19722	Fan, flywheel	1		3	27500	Flywheel	1	
2	27371	Starting flange	1		4	27515	Nut M12 x 1.25	1	

Ignition coil

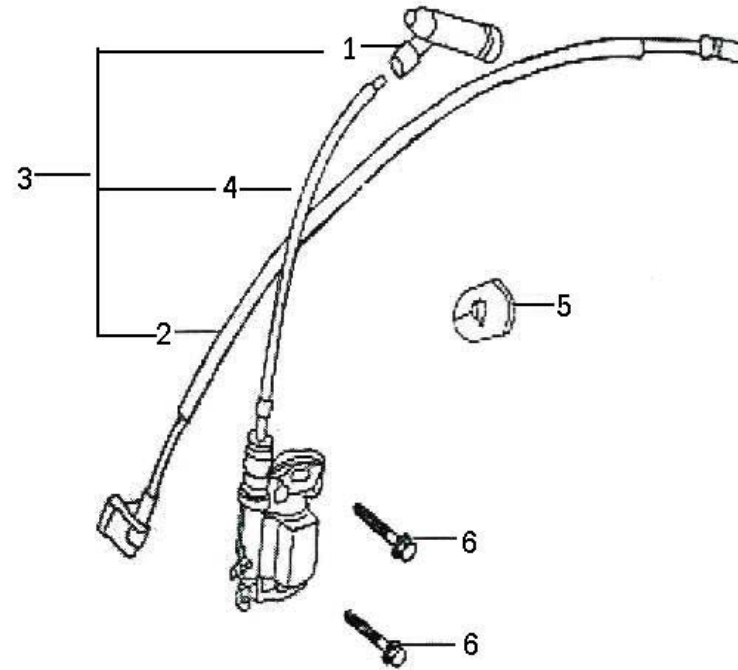

Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	34310	Cap, spark plug	1		4	34510	Ignition coil	1	
2	34410	Cable, engine stop	1		5	34511	Bush, ignition coil	1	
3	34500	Ignition coil sub-assy	1		6	GB5789-86	Bolt M6 x 27	2	

Pump

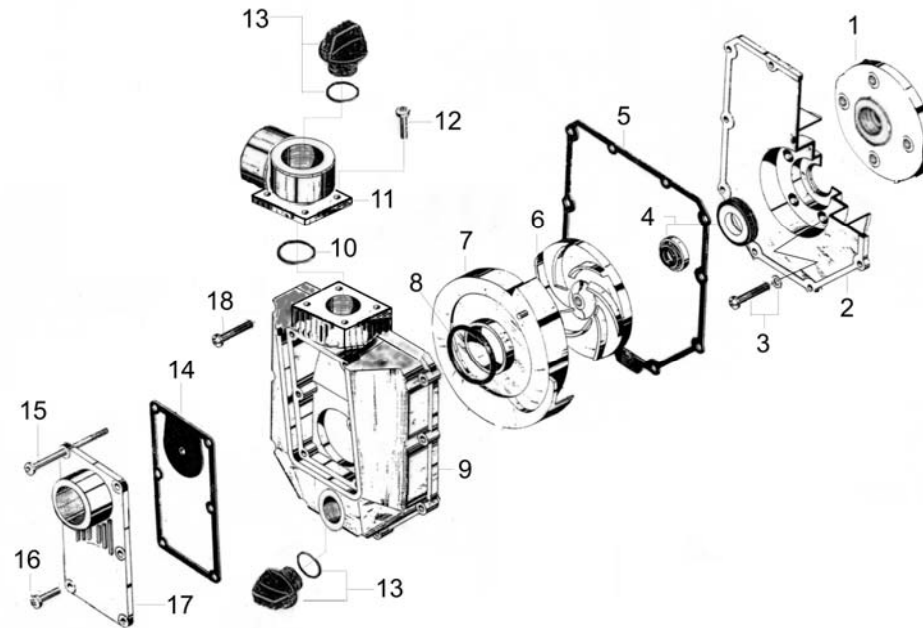

Ref. No	Parts No	Parts Name	Q'ty	Remarks	Ref. No	Parts No	Parts Name	Q'ty	Remarks
1	15XK010	Flange	1		10	15XK035	Outlet gasket	1	
2	15XK005	Pump cover	1		11	15XK040	Outlet flange	1	
3		Bolt flange M6 x 17mm	4		12		Bolt flange M6 x 15mm	4	
4	15XK008	Mechanical seal	1		13	15XK069	Plug set	2	
5	15XK011	Pump gasket	1		14	15XK045	Inlet gasket & check valve	1	
6	15XK099	Impeller	1		15		Bolt flange M6 x 82mm	2	
7	15XK078	Volute casing	1		16		Bolt flange M6 x 15mm	4	
8	15XK068	Volute gasket	1		17	15XK056	Inlet flange	1	
9	15XK021	Pump casing	1		18		Bolt flange M6 x 55mm	6	